



Chain Disconnect Lock Device INSTALLATION INSTRUCTIONS

1. Unlock the padlock to separate the lock bolt from the barrel as shown.
2. Attach the chain to the lock bolt using the quick connect link provided in the gate hardware kit.
3. Install the lock barrel on the gate bracket that is closest to the gate operator when the gate is in the closed position. Use the 1/2-13 nuts and lock washers provided with the gate hardware kit, but only install them loosely for now.
4. Re-install the lock bolt in the barrel and secure with the padlock. Using wrenches, tighten the 1/2-13 nuts to draw the slack out of the chain until it is fully tensioned according to the instructions in the gate owners manual. When the chain is fully tensioned, snug the inside nut against the bracket to jamb the nuts to prevent them from working loose.

To manually disconnect the chain from the gate, the padlock can be unlocked and extracted from the bolt and barrel to release the chain from the operator. After unlocking the padlock, pull upwards on the handle to extract the lock and release the chain.

5. To reinstall the chain to the gate when tools are not available, the lock bolt can be re-coupled to the barrel and padlocked using the hole furthest from the chain, as shown. This will allow sufficient slack in the chain for hand re-installation. This lock position is for temporary use only, until proper tools can be used to re-tension the chain as in Step 4, above.

